




typemaster® X400

User Manual

# typemaster® X400

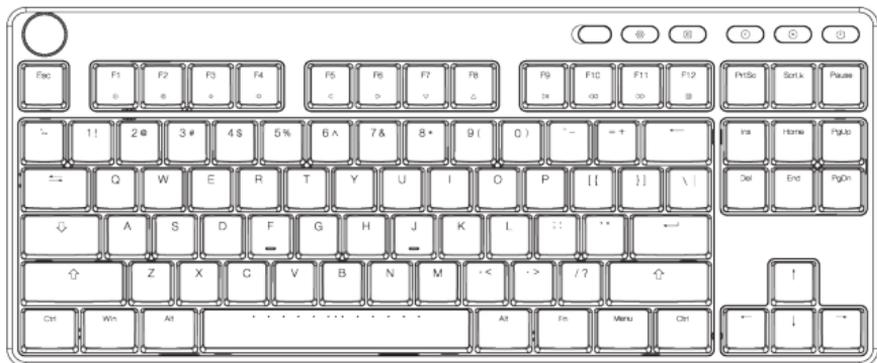

## Product Introduction

The Typemaster is with QWERTY layout, the layout is 87 KEYS, X400 is equipped with MX Low Profile RGB switch. X400 is with Type-C connector so the connector is stronger than before. It's supporting N-key Roll Over and Dual PCB board and LED backlit X400 is with a password lock function on the keyboard, the lock function is protected this keyboard.

## Package Contents

1. Keyboard x1
2. User manual x1
3. Key puller x1
4. USB Type C cable x1
5. ESC keycap x1

## Keyboard Specification:

Key number: US ASCII (87 keys) = US Layout

Key switch lifetime: 50KK Times

Dimensions: L 347.5mm、 W 146mm、 H 28.62mm

Interface: USB (DC5V --- 500mA)

Cable length: 1.8 m

## Function Description:

-  Switch the main switch to the left (red) to lock the keyboard, and turn to the right (green) in order to unlock the keyboard.
-  Rotate counter-clockwise to decrease the volume, and rotate the button clockwise to increase the volume. Press down the button to switch to silent and non-silent mode.

Button					
Function	Password Setup	Password Reset/update	F-Section Short Cut Key Lock	Win Key Lock	Reset all Settings

## Key Feature:

The shortcut functions can be accessed through pressing Fn+(F1-F12).

When is  pressed, F1-F12 will automatically activates below function.

Key	Shortcut Function
F1	Turn on/off Backlit
F2	Change Backlit Mode
F3	Decrease Backlit Brightness
F4	Increase Backlit Brightness
F5	Change direction of Backlit
F6	Change back direction of Backlit
F7	Decrease the backlit flashing rate
F8	Increase the backlit flashing rate
F9	Play/pause playlist
F10	Previous Song on playlist
F11	Next Song on playlist
F12	Calculator Application

## Password Protection Function:

Keyboard locking feature will be activated when the  switch is turned to the left, when keyboard is locked, the keyboard will not be able to provide any service. When  is switched to the right, the keyboard is activated and ready to use. A passcode can be set up to activate and deactivate the keyboard as well.

## Password Setup:

1. Make sure the keyboard is turned on.
2. Press  button.
3. Create a passcode between 1-6 digit when the number key caps are lit up, then press enter to confirm the passcode.
4. Password is set up completely after all the steps above have been completed.

## \*\*Please Note:

1. When the password is entered incorrectly, you may re-enter the correct password again after keypads have done flashing.
2. If the password is entered incorrectly 3 times, it will go back to the first step of initial password setup.
3. Password setup will end if  is pressed during the setup.
4. To cancel entering the password login, just simply press the “enter” key on the keyboard.
5. The password will not be wiped out even when the keyboard is disconnected from the power.

Please enter the correct password when the keyboard is first turned on from the off mode (number keypad will be flashing to remind you) to unlock the keyboard. If the password is entered incorrectly for 7 times, the keyboard will lock itself up.

## Change Password:

1. Please make sure keyboard is turned on.
2. Press  Key.
3. Enter the original password when the number pad is flashing, then press “enter” key to confirm.
4. Press  key when it is lit up after entering the correct original password, then you can reset the new 1-6 digits new password.
5. If the password is entered incorrectly, you may re-enter the password after the keypads flashed. However, if the password is entered incorrectly for 7 times, the keyboard will lock itself up.

### **\*\*Please Note:**

1. If the password is entered incorrectly 3 times during the password reset process, the password reset will fail.
2. When the keyboard is locked due to entering the incorrect password for too many times, you may use a tool with sharp tip to poke the hole on the bottom of keyboard by the stand to erase the password.

## Backlit Feature:

typemaster® X400 provides and supports 7 types of backlit which includes: Solid, Breathing, Single Color, Reactive, Wave, Ripple, Lightening modes. Please use Fn+F2 key to adjust the backlit modes.

## Reset to Manufacturer Setting:

With no password implemented: Press  button for 5 seconds, when all the keys flash 3 times and go off, the keyboard will reset back to its manufacturer setting.

With password implemented: Press  button for 5 seconds then enter the correct password afterward, and the keyboard will reset itself.